



PRODUCT CARE INSTRUCTIONS
(Flexflags, A-Frames, Table Drapes etc.)

FOR BEST RESULTS keep the fabric material from coming in contact with the ground, dirty floor, etc. The same goes for dirty hands...it's MUCH easier to do this than to clean the products later on...

Care & Cleaning

If the fabric should get dirty it can be washed with mild soap & cold water and in severe cases, can even be tossed into a washing machine on a GENTLE SETTING with COLD WATER ONLY...drying should always be natural or air-dried, and NEVER in an actual dryer. (NOTE: If excessive wrinkling occurs use a steamer to reduce wrinkles)

For best results, dry Flexflags and other free-standing flags and A-Frames in their "set up" configuration to reduce wrinkles. Table drapes can be dried on a no-heat setting in a non-commercial dryer.

For larger products such as tents & canopies, it is acceptable to hose off the tops and stake hardware. Again being sure to pack down only when completely dry.

CAUTION: Products should never be stored "wet" or mold can occur. Air dry all products before storing.

NOTE: It is critical that all hardware placed inside product carry bags be securely placed inside designated interior pouches so that hardware doesn't come in contact with fabric during storage to eliminate possibility of dirt or tearing.